

# Changing the Music on your PlayNetwork Player

## *For Channel Suite and Custom Blend Users*

Changing the channel on your music player is simple, and only requires the push of a few buttons! This document contains step by step, visual instructions on how to change your music content in seconds.

**Step 1:** Select the button beneath the “ Q Menu” option on your player



**Step:2:** Using the down arrow from the arrow keypad on your player, press down until you see View/Select Channel



**Step 3:** Press the enter button (the button in the middle of the arrow keypad) once you see the arrow on the blue screen next to "View/Select Channel"- the player will notify you that it is "loading channels"



**Step 4:** press the down arrow once more (using the arrow keypad) until you see the channel you would like to select



**Step 5:** With the arrow on the blue screen beside the channel you would like, press the enter button



**Step 6:** The blue screen will indicate that your newly selected channel is loading, and will begin to play your selection. Please feel free to contact Voice Solutions should you have any questions about your music or how to change the music from your player at 763-595-8000, option 0